


Audi A4

Current Flow Diagram

No. 1 / 13

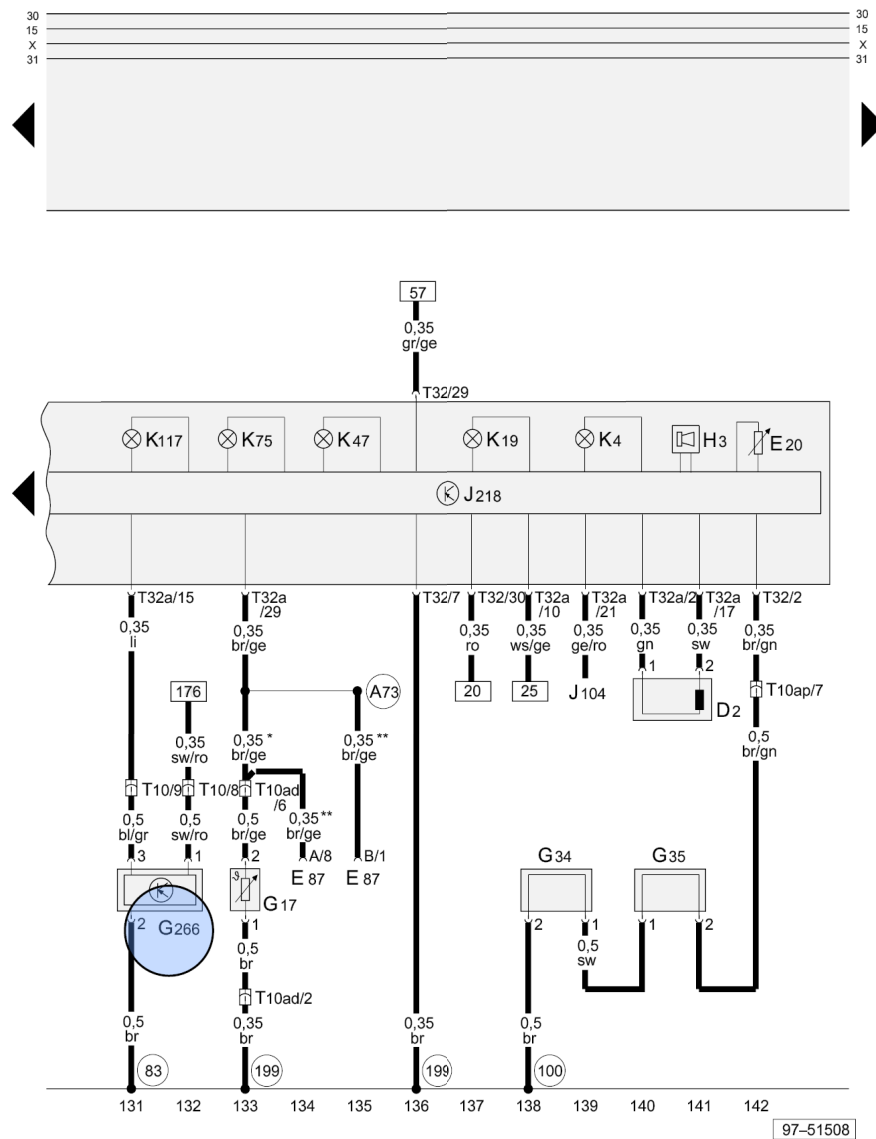

Dash panel insert, combi-processor in dash panel insert, ambient temperature sensor, brake lining/pad wear senders, switches and instruments-control, oil level sender

- D2 - Immobilizer reading coil
- E20 - Switches and instruments, lighting control
- E87 - Control and display unit for air conditioner/Climatronic
- G17 - Ambient temperature sensor
- G34 - Brake lining/pad wear sender, front left
- G35 - Brake lining/pad wear sender, front right
- G266** - Oil level thermo sender, service interval
- H3 - Buzzer/gong
- J104 - ABS with EDL control unit
- J218 - Combi-processor in dash panel insert
- K4 - Side light warning lamp
- K19 - Seat belt warning system warning lamp
- K47 - ABS warning lamp
- K75 - Airbag warning lamp
- K117 - Immobilizer warning lamp
- T10 - 10-pin connector, brown, connector point, electronics box, plenum chamber
- T10ad - 10-pin connector, red, left connector point, A pillar
- T10ap - 10-pin connector, grey, right connector point, A pillar
- T32 - 32-pin connector, blue, on dash panel insert
- T32a - 32-pin connector, green, on dash panel insert
- 83 - Earth connection -1-, in front right wiring harness
- 100 - Earth connection -1-, in ABS wiring harness
- 199 - Earth connection -3-, in dash panel wiring harness
- A73 - Connection (ambient temperature display), in dash panel wiring harness
- * - Only models without air conditioner
- ** - Only models with air conditioner

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink