

D RELAY LOCATIONS

① : Engine Room R/B	Engine Compartment Left (See Page 8)
○ : Engine Room J/B	

(Gasoline)

